

SE-C2000 Important Notice

Initializing the cash register

• Automatic initialization

Use the following procedure to initialize the cash register before using it for the first time after you purchase it.

1. Install the two memory backup batteries (see page 10 of the User's Manual).
2. Plug the cash register into a wall outlet.
- At this time, "00000000" appears on the display and the printer operates for a minute. Initialization is complete when the printer stops operating.

CAUTION!

Automatic initialization (which clears all sales and programming data stored in the register's memory) is performed whenever all power (both the backup batteries and power through power cord) is cut from the cash register and then restored. The program data stored in the flash memory is restored.

Remember...

Main power cut by:

- Unplugging the cash register
- Power failure

+

Backup power cut off by:

- Removing the batteries
- Dead or low batteries

=

Automatic initialization when the main power is restored and the mode switch is set to any position besides OFF.

• Manual initialization

Use the following procedure to initialize the cash register and clear all transaction data and program data from its memory.

1. Insert the mode key marked "PGM" into the mode switch.
2. Turn the mode switch to the OFF position.
3. While holding down the  key, turn the mode switch to the PGM position.
4. Release the  key.
5. Enter      and press the  key.

A. Language selection

This specification defines the language to use for the date in receipt/journal printing.

English	⇒	
French	⇒	
Spanish	⇒	
German	⇒	

B. Area / monetary mode

This specification defines the area and the decimal position.

U.S.	⇒	
Canada	⇒	
German	⇒	
Two decimal place	⇒	
No decimal place	⇒	

C. Department number

This specification defines the number of department keys.

Always ⇒  

Clearing a machine lock up

If you make a mistake in operation, the cash register may lock up to avoid damage to programs and preset data. Should it happen, you can use the following procedure to clear the lock up without losing any data.

1. Power off the register.
2. Insert the PGM key in the mode switch.
3. Press down and hold , and turn the mode switch to PGM mode.
4. The display shows FC (on alpha-display), then release .
5. Press . A receipt is issued.